SWNX | INSTRUCTION MANUAL
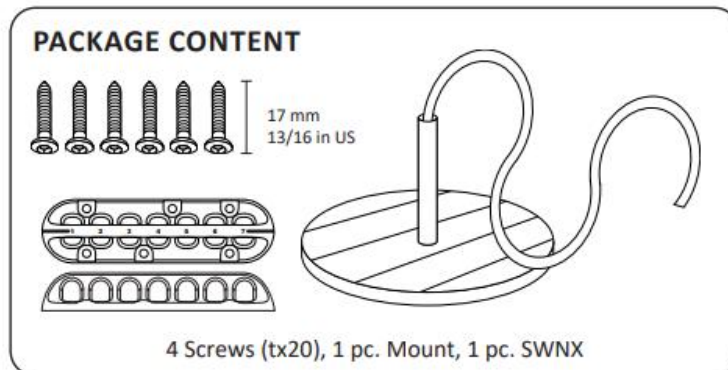
PACKAGE CONTENT

17 mm
13/16 in US

4 Screws (tx20), 1 pc. Mount, 1 pc. SWNX

Mounting requires additional tools: 1 pencil + screwdriver.
Attention: Table thickness should be over 20 mm (13/16 in US)

1.
Sit at the table.

2.
Mark the position of the knees under the table.
Centered between the knees.

3.
Mount the bracket with 4 screws.

4.
Attach SWNX to the bracket.

5.
5cm ↑
Adjust so that the foot rest hangs
50 mm (2 in US) parallel above the floor.